


# 过渡接头 ADAPTER

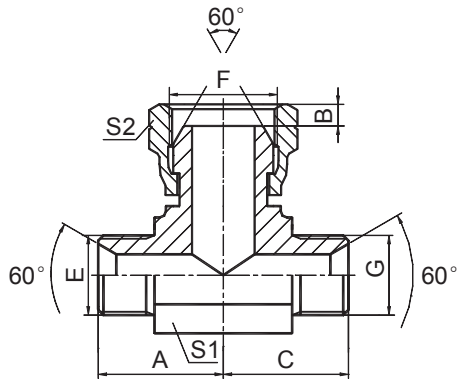

## BB

英管外螺纹 60° 内锥 / 英管内螺纹 60° 外锥 三通  
 BSP MALE 60° SEAT / BSP FEMALE  
 60° CONE BRANCH TEE

代号 PART NO.	螺 纹 THREAD			尺 寸 DIMENSIONS						
	E	F	G			A	B	C	S1	S2
BB-02	G1/8"X28	G1/8"X28	G1/8"X28			19.8	5.5	19.8	11	14
BB-04	G1/4"X19	G1/4"X19	G1/4"X19			24.5	5.5	24.5	14	19
BB-06	G3/8"X19	G3/8"X19	G3/8"X19			27.5	6.3	27.5	16	22
BB-08	G1/2"X14	G1/2"X14	G1/2"X14			34.5	7.5	34.5	22	27
BB-12	G3/4"X14	G3/4"X14	G3/4"X14			40	10.9	40	27	32
BB-16	G1"X11	G1"X11	G1"X11			46	11.7	46	33	41
BB-20	G1.1/4"X11	G1.1/4"X11	G1.1/4"X11			50.5	11	50.5	41	50
BB-24	G1.1/2"X11	G1.1/2"X11	G1.1/2"X11			57.5	13	57.5	48	55
BB-32	G2"X11	G2"X11	G2"X11			72.5	16	72.5	63	70